
Module 11 – Tachometers

For this module you will need:

- Your car constructed from Module 10
- 6 Female to male jumper wires
- 2x tachometers

In this module we will interface the ESP32 with speed sensors (i.e., tachometers). The disks installed during the chassis construction will be used to measure the rotations per minute of the wheels.


A tachometer is a useful tool for counting the RPM (rotations per minute) of a wheel or basically anything that spins. As the disk spins between the sensor, the link between the transmitter and receiver is broken. When the link between them is broken, the voltage read by the ESP32 changes from high to low. Detecting these transitions in software is how we can detect wheel movement and can execute some code that calculates the current RPM of whatever is spinning to break the transmitter/receiver link.

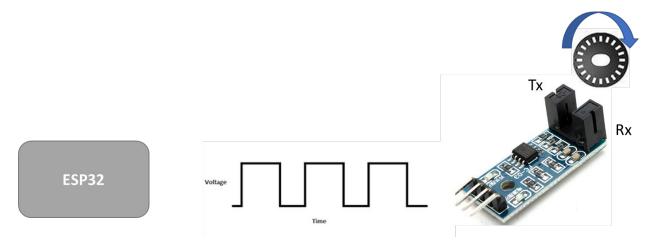


The tachometers Vdd connect to 3.3V. D0 is the data pin. Gnd connects to Ground. A0 is not used.

For clarity, only the tachometer circuit is shown in the diagram. Add this sub-system to your current breadboard layout.

Tachometer A (Motor A, Left Motor)

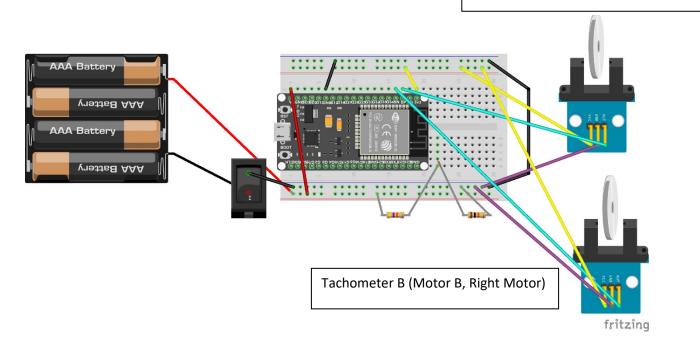

Place the sensor face down in the slots where the disks are.

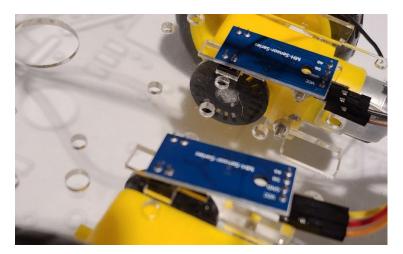

Open the Arduino IDE, upload the sketch: stemcamp_tachometer_demo.ino

Open the serial monitor.

Be sure the 5V pin is disconnected from the battery pack.

Keep the microcontroller plugged in by USB.

Pick up the car and turn on the power switch.